

Date: 31 October 2014

Author: Susan Twartz

Distribution: General Public

Instructions for Updating Firmware on S3, S1 and I3 Consoles manufactured prior to January 2013

This procedure outlines the procedure for updating the firmware on the I3, S3 or S1

1. Switch off the consoles.
2. Launch Vista.
3. Press and hold the yellow and red modifiers on each USB console.
4. Switch on the USB consoles. Once powered up, the console will display a message on the playback that says "Ready to Download Firmware"
5. Keep holding the buttons down until the Vista application has fully booted and displays the option to create a new show or load an existing show.
6. Release the buttons.

The firmware is now updated.

Instructions for Updating Firmware on L5, E2 and I3 Consoles manufactured after January 2013

1. Switch off the consoles.
2. Press and hold the 3rd and 4th "*" buttons on the top left playback as illustrated below



3. Power on the console. Once powered up, the console will display a message on the playback that says "Ready to Download Firmware"
4. Keep holding the buttons down until the Vista application has fully booted and displays the option to create a new show or load an existing show.
5. Release the buttons.

The firmware is now updated.